

 
 
Delstar®

USER'S MANUAL DS 1700 SERIES



Includes:

- 1 Unit
- 1 USB Cable
- 1pr Stereo Ear phones
- 1 Mini CD (Drivers Win98se) and Mp3 Player Utilities

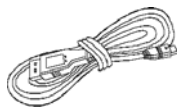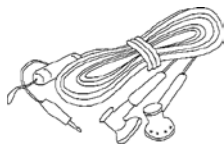

USB DRIVER INSTALLATION (Windows 98 SE only)

If you are using Windows 98 SE, you must install the USB driver and update utility.

1. Place the Installation CD in your computer's CD-ROM drive.
2. In My Computer, double-click the disc drive (D :) icon (where D: is your CD-ROM drive).
3. Find and double-click "Win98Driver.exe" to start the installation process. A setup dialog window will appear on the screen.

4. Follow the on-screen instructions. When setup is complete, restart your computer.

USB driver installation is not necessary if you are using Windows Me/2K/XP/VISTA or Mac OS X version 10.2.6 or above. Simply connect your player to the computer; the operating system will then take a moment to set up and then a removable disk icon will appear in "My Computer." (For Mac OS X users, a removable disk icon will appear on the "Desktop.")

SOFTWARE REQUIREMENTS

**WINDOWS 98SE, WINDOWS ME, WINDOWS2000, WINDOWS XP, WINDOWS VISTA AND OS X VERSION 10.2.6 OR ABOVE.
WINDOWS MEDIA PLAYER PLEASE UPGRADE 9.0 OR ABOVE.
DIRECT X 9.0 OR ABOVE**

Delstar

DS 1700 Series Mp3 Player

Delstar mp3 player is a brand new generation of digital devices. Supports several formats including mp1, mp2, mp3, WMA, WMP and wave files.

Features

1 GIGABYTE OF FLASH MEMORY

SUPER COMPACT DESIGN

CLIP ON A DESIGN

GUI (GRAPHIC USER INTERFACE)

TEXT FILE READER

**SUPPORTS AUDIO FILES MP1, MP2, MP3 AND
UNPROTECTED WMA FILES
SEVEN PRESET EQUALIZER SETTINGS
NORMAL, ROCK, POP, CLASSICAL, SOFT, JAZZ & DBB
AUTOMATIC POWER SAVER
VOICE RECORDER
OVER 60 HOURS OF RECORD TIME
BUILT-IN MICROPHONE**

*Thank you for your purchase. Please read this manual carefully
before using your new player.*

Connecting your mp 3 player to your computer

Connect one end of the USB cable to your computer's USB Port. Then connect the smaller end of the USB cable to your MP3 player's USB Port. Turn the unit on. In MS Windows a new icon will appear in "my computer". Removable disk will appear in my computer. Windows recognizes it as a removable disk.

Charge through your computer's USB port.

Your player will be charged while it is connected to a powered-on computer regardless of whether your player itself is powered on or off.

To rip Audio CD track(s) using Windows Media Player 10, follow these steps

Insert the Audio CD into the drive. If using Windows XP, the AutoPlay dialog appears.




Choose Tools from menu, select options.




Click on the Rip Music Tab
By default, WMP10 rips audio tracks to WMA file format. To change the rip settings, click Format drop box and select mp3.

Configure the Rip settings such as the file format (mp3 or

wma). If you opt for wma file format make sure the Copy Protect Music Box is UNCHECKED.

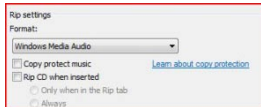

Click apply and OK.

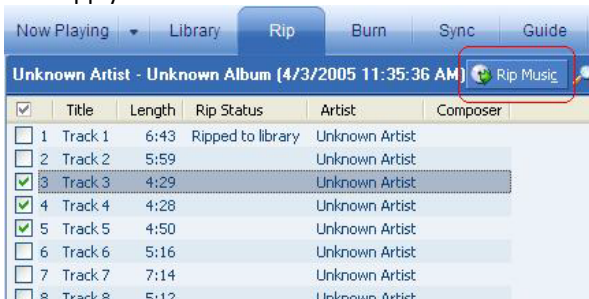

Choosing the tracks you want to rip(convert) by selecting the check box next to the track
Click on the Rip Music button to begin.

Transferring Files and Folders

Find files or folders you wish to transfer.

Select and highlight

Use Copy command

Go to “My Computer”

Locate and open “Removable Disk”

Once open paste file of folder.

Note: *There are many ways to transfer files and folders. Please refer to your operating system's help files for additional procedures*

Knowing your player



Battery

Your mp3 player's batteries are rechargeable Ion Lithium.

It recharges through your USB Port.

First turn the unit on then connect to available USB Port.

It's recommended to charge the mp3 player for 4 to 6 hours prior to initial use.

Charge times may differ.

Average play time on full charge is 2 ½ to 4 hours.

Battery indicator is visible in play screens.

Fully charged batteries will be indicated by a filled battery icon.

As battery depletes the battery icon will gradually clear.

Volume

First click volume key then PREV to reduce the volume level.

Click the next key to increase volume level

Power on power off

Turn on/off switch to on position.

You can also turn on or off your mp3 player by pressing and holding the play button.

Button operations

Menu: Enter the main menu or the open menu.

Volume: press to adjust volume

Next: next options, fast forward, increase volume level.

PREV: Previous options, rewind, decrease volume level.

Button Operation

Each button has three levels of operation.

1 Quick press

2 Extended press

3 Press and hold

Mp3 playback

Insert earphones into your mp3 player's phone jack.

Turn mp3 player on

Use the next and previous buttons to navigate to the music icon.

Quick-press the menu button (the unit will initialize)

Quick-press the play button to begin and pause your mp3 sound file.

Quick-press next to select the next song

Quick-press PREV to select PREV song

Press and hold next button to fast forward

Press and hold PREV button to rewind

Adjusting volume levels

Quick-press VOL button

Press and hold next button to increase volume

Press and hold previous button to decrease volume

Volume level is measured in 31 steps (0-31)

Mp3 playback sub-menu

Stop sub-menu

Local Folder: lets you navigate through folders and files.

Quick-press the menu to select

Delete file: lets you delete current file. Quick-press the menu to select.

Delete all: lets you delete all folders and files. Quick-press menu to select

Play sub-menu

Adjusting repeat settings

To adjust repeat settings press the menu button while the unit is playing back a MP3 file

You have now entered the playback sub-menu

Using the next or previous button scroll down to repeat
Quick-press menu button.

Use the next and previous button to select repeat mode.
Quick-press menu to select

Repeat Modes

Normal: place file and current folders in normal sequence.

Repeat one: plays the single file repeatedly.

Folder: plays all music files and current folder in sequence

Repeat folder: plays all music files and current folder repeatedly

Repeat all: plays all music files repeatedly

Random: plays all music files randomly

Intro: plays first few seconds of each song in file

Tempo rate

Adjusting tempo settings

To adjust tempo settings press the menu button while the unit is playing back a MP3 file

You have now entered the playback submenu

Using the next or previous button scroll down to tempo

Quick-press the menu button.

Use the next and previous button to adjust tempo.

Quick-press menu to select

Adjusting equalizer settings

To adjust equalizer settings press the menu button while the unit is playing back a MP3 file

You have now entered the playback submenu

Using the next or previous button scroll down to equalizer

Quick-press menu button.

Use the next and previous button to adjust equalizer.

Quick-press menu to select

Natural
Rock
Pop
Classical
Soft
Jazz
DBB

Replay

To adjust replay settings press the menu button while the unit is playing back a MP3 file

You have now entered the playback submenu

Using the next or previous button scroll down to replay
Quick-press the menu button.

Press the next button to select the beginning of a repeat
Quick-press the next button again to conclude the
segment.

The mp3 player will begin to repeat the selection you
chose.

Replay times

To adjust replay times settings press the menu button
while the unit is playing back a MP3 file

You have now entered the playback submenu

Using the next or previous button scroll down to replay times

Quick-press menu button.

Use the next and previous button to adjust replay times.

Quick-press menu to select

Replay gap

To adjust Replay gap settings press the menu button while the unit is playing back a MP3 file

You have now enter the playback submenu

Use the next or previous button scroll down to Replay gap.

Use the next and previous button to adjust replay gap

Quick-press menu to select

Voice Recorder

Turn mp3 player on

Use the next and previous buttons to navigate to the record icon.

Quick-press the menu button (the unit will initialize)

Quick-press the play button to begin and stop or pause recording.

Press and hold menu button to save recording.

Voice Recorder stop Sub-menu

Local folder: Lets you navigate through folders and files.
Quick- press the menu to select.

Record type: Fine record: high quality recording uses most disk space.

Long record: lower quality recording uses less disk space

Fine VOR: high quality recording uses most disk space

Long VOR: lower quality recording uses least amount of disk space

All files are saved in wav file format.

Voice recorder playback

Turn mp3 player on

Use the next and previous buttons to navigate to the Voice icon.

Quick-press the menu button (the unit will initialize)

Quick-press the play button to begin playing the recording.

Quick-press next to select the next file

Quick-press PREV to select PREV file

Voice recorder playback Stop Sub-menu

Local Folder: lets you navigate through folders and files.

Quick-press the menu to select

Delete file: lets you delete current file. Quick-press the menu to select.

Delete all: let you delete all folders and files. Quick-press menu to select

Telephone Book

Turn mp3 player on

Use the next and previous buttons to navigate to the “tel” icon.

Quick-press the menu button

Quick-press the play button to select tel. book option or text reader.

Tel book: Lets you store an arranged telephone numbers. Requires you install the appropriate software from the mini CD included with your mp3 player purchase. Please read the help file included in the telephone book utility.

Tell book Sub-menu:

Browse telephone: Lets you browse thru the telephone no# your have stored on your mp3 player.

Import telephone: Lets you import phone numbers from your computer

Export telephone: Lets you export phone numbers to your computer

Text reader: Lets you visually read TXT files on your mp3 player's LCD screen.

Turn mp3 player on

Use the next and previous buttons to navigate to the "Txt" icon.

Quick-press the menu button (the unit will initialize)

Scroll down to TXT reader.

Quick-press menu to open text reader.

Quick-press next or PREV navigate through text file.

System Settings

Turn mp3 player on

Use the next and previous buttons to navigate to the system settings icon.

Quick-press the menu button

Quick-press next or PREV to navigate system settings sub-menu

System Setting Sub-Menu

Record time: Lets you set the date and time.

Once set it can help you keep track of your voice recordings by date and time.

ScrSav Set: Lets you turn on and turn off screen savers as well as choose from five different icons

Language: Lets you choose from 18 different languages

Power Off: Lets you adjust the auto sleep mode time and auto power off time

Replay Mode: Lets you adjust between automatic and manual replay modes

Contrast: Lets you adjust the LCD screens contrast

Online Mode: Lets you choose between multi drive, normal only, encrypted only

Memory Info: Displays the amount of memory available and used

Firmware Version: Displays current firmware version

Firmware upgrade: Initialize to make F/W updates

Please note, do not attempt firmware update without contacting Delstar Service and support.

Any firmware update without contacting Delstar will void the warranty.

You could contact Delstar at 1 954 458 7771.

Our address

Delstar

1060 N.W. First court

Hallandale, Florida 33009

U.S.A.

DELSTARSWC@AOL.COM